

KONO 87

Mechanical Keyboard

Quick Start Guide



Connection

Fun + ___	Action
	Slide switch to left position and plug in USB-C cable for Wired Mode
	Slide switch to right position for Bluetooth Mode, Hold Fn + Q, W, or E for 5 seconds to pair
Q	Connect to Bluetooth device 1
W	Connect to Bluetooth device 2
E	Connect to Bluetooth device 3
Spacebar	Switch to wired from Bluetooth (if plugged in)

RGB Backlighting

Fun + ___	Action
DEL	Change backlight color
INS	Change backlight animation
↓ / ↑	Adjust brightness
→ / ←	Adjust animation speed

2

Media

Fun + ___	Action
F7	Previous Song
F8	Play/Pause
F9	Next Song
F10	Mute
F11	Volume Down
F12	Volume Up

Device

Fun + ___	Action
F1	Decrease screen brightness
F2	Increase screen brightness
WIN	Toggles Windows/OS key lock
Esc	Hold for 3 seconds to factory reset

3

Other

Fun + ___	Action
F1	Decrease screen brightness
F2	Increase screen brightness
F3	Window Managment
F4	File Explorer
F5	Mail
F6	New browser window

Warranty

Limited one-year warranty. Please contact your place of purchase for warranty support.

support@kono.store

4

R1

R1

R2

R3

R4

R4

